

SERVICE MANUAL

Amore Mio Shopping Trolley
From Trustcare.

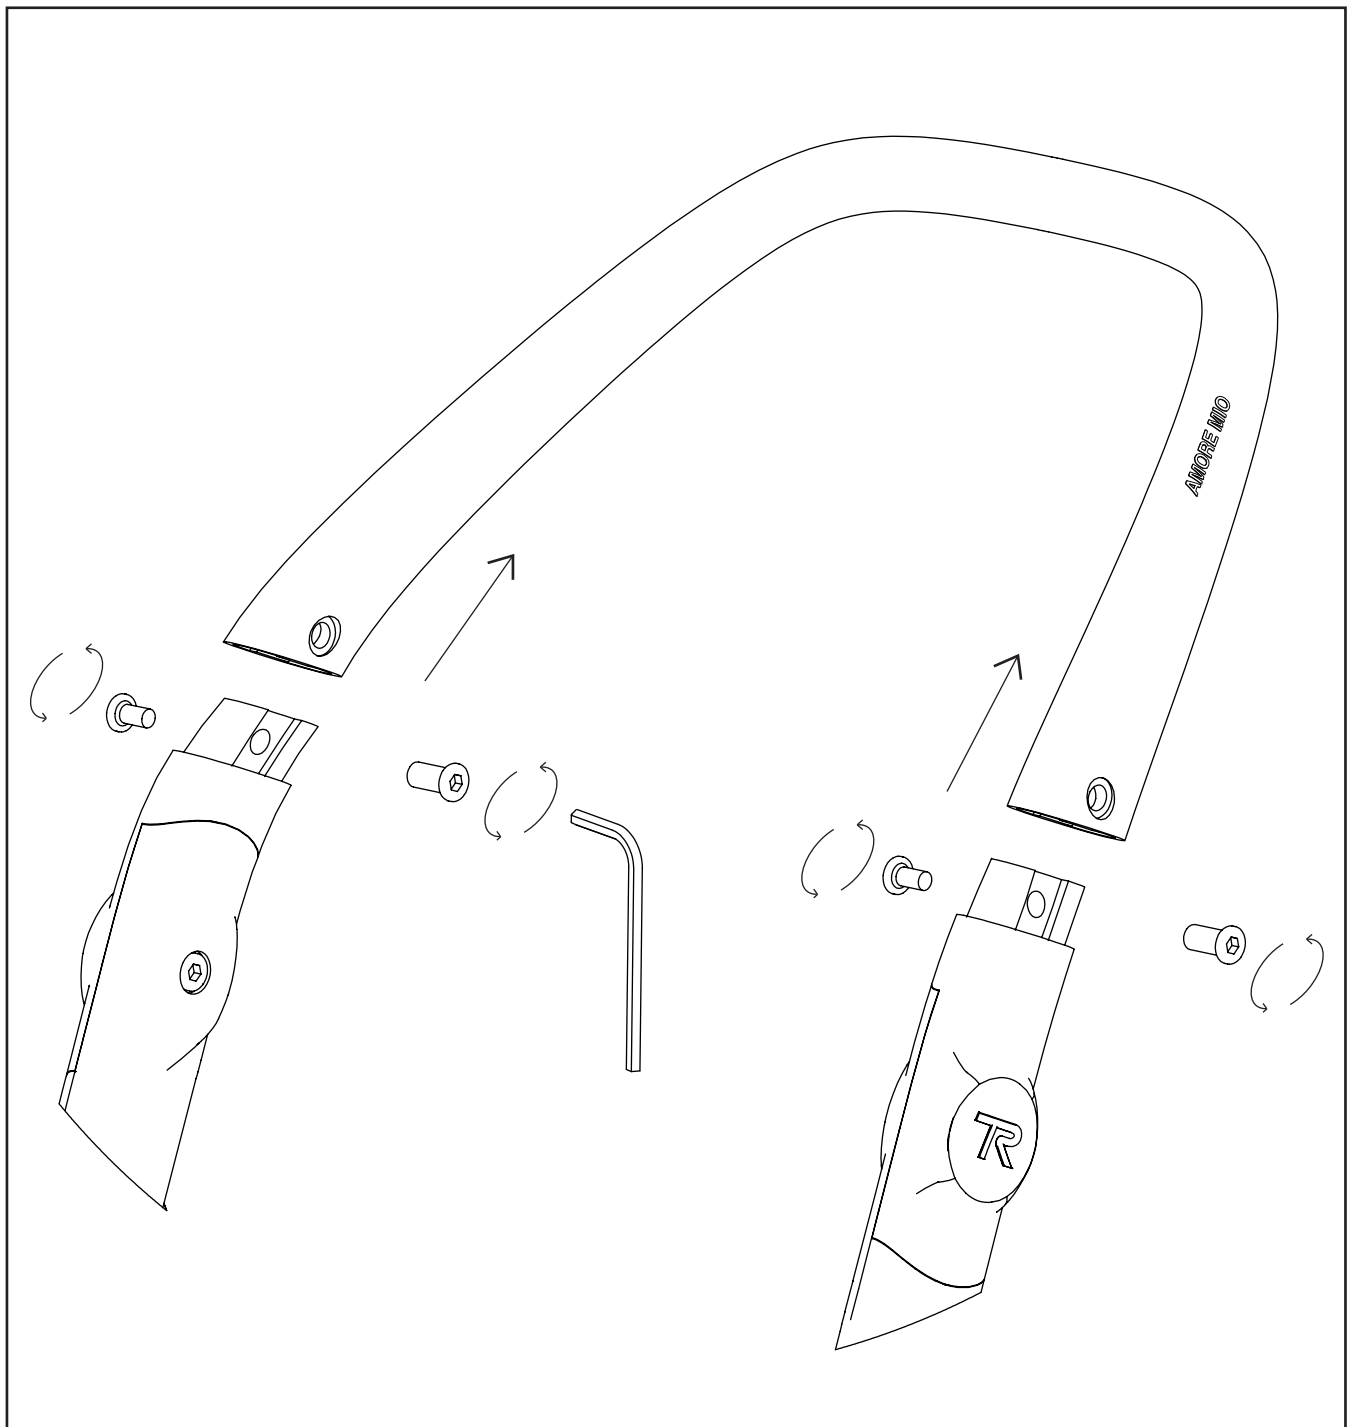


TABLE OF CONTENTS

Exchange of upper handle.	Art. No. AM101	Page 03
Exchange of handle folding mechanism.	Art. No. AM104	Page 04
Exchange of rear wheel.	Art. No. AM109	Page 05
Exchange of rear wheel connector.	Art. No. AM108	Page 06
Exchange of bearings and button for rear wheel.	Art. No. AM109	Page 07
Exchange of front wheel with bearing.	Art. No. AM110	Page 08
Exchange of front wheel connector.	Art. No. AM111	Page 09
Exchange of gas spring.	Art. No. AM107	Page 10
Disassemble of inner frame		Page 11
Exchange of lower handle.	Art. No. AM102	Page 12
Exchange of lock mechanism.	Art. No. AM105	Page 13
Exchange of slider.	Art. No. AM106	Page 14
Separate front / back frames.	Art. No. AM104	Page 15
Exchange of inner frame holder.	Art. No. AM103	Page 16

Exchange of upper handle.

Amore Mio Spare part. Art. No. AM101




Unscrew the bolts and pull the handle up.

Exchange of handle folding mechanism.

Amore Mio Spare part. Art. No. AM104

TRUST
CARE

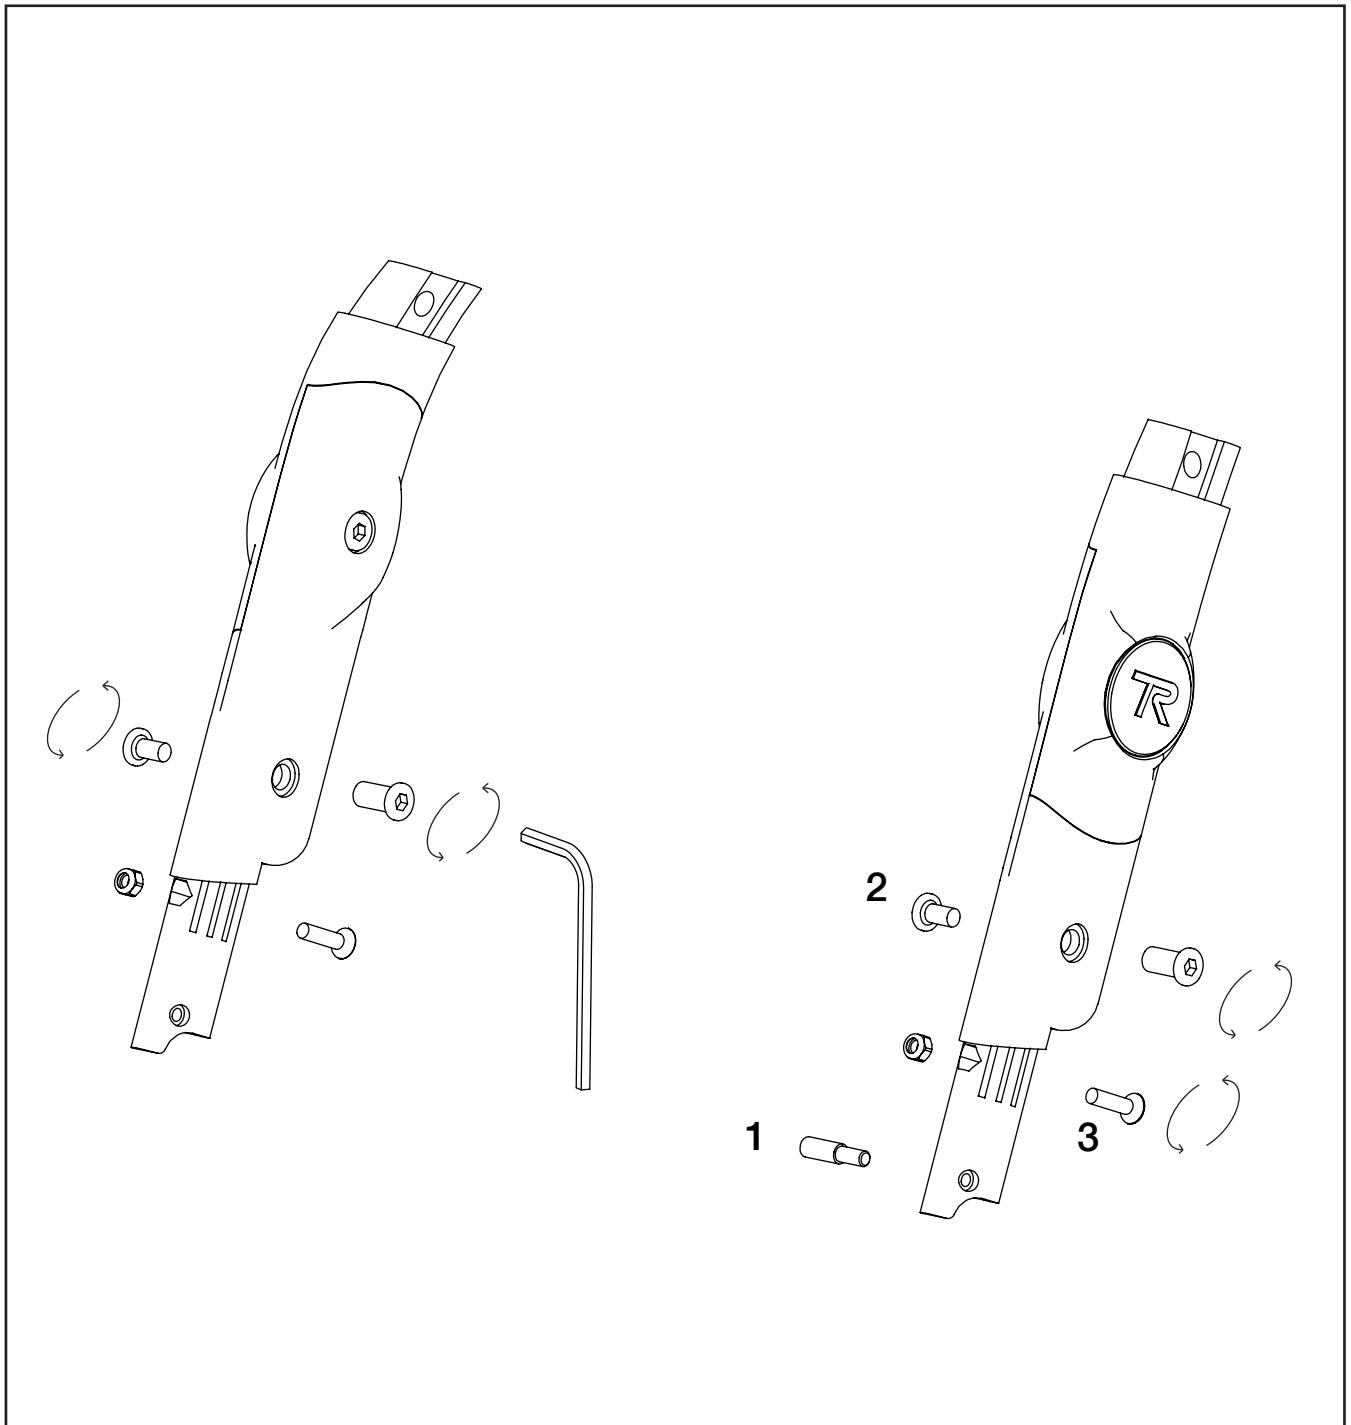


Unscrew pin 1 first, unscrew bolts 2 connecting the rear frame.

Unscrew bolts 3 connecting to the front tubes.

Exchange of rear wheel.


Amore Mio Spare part. Art. No. AM109

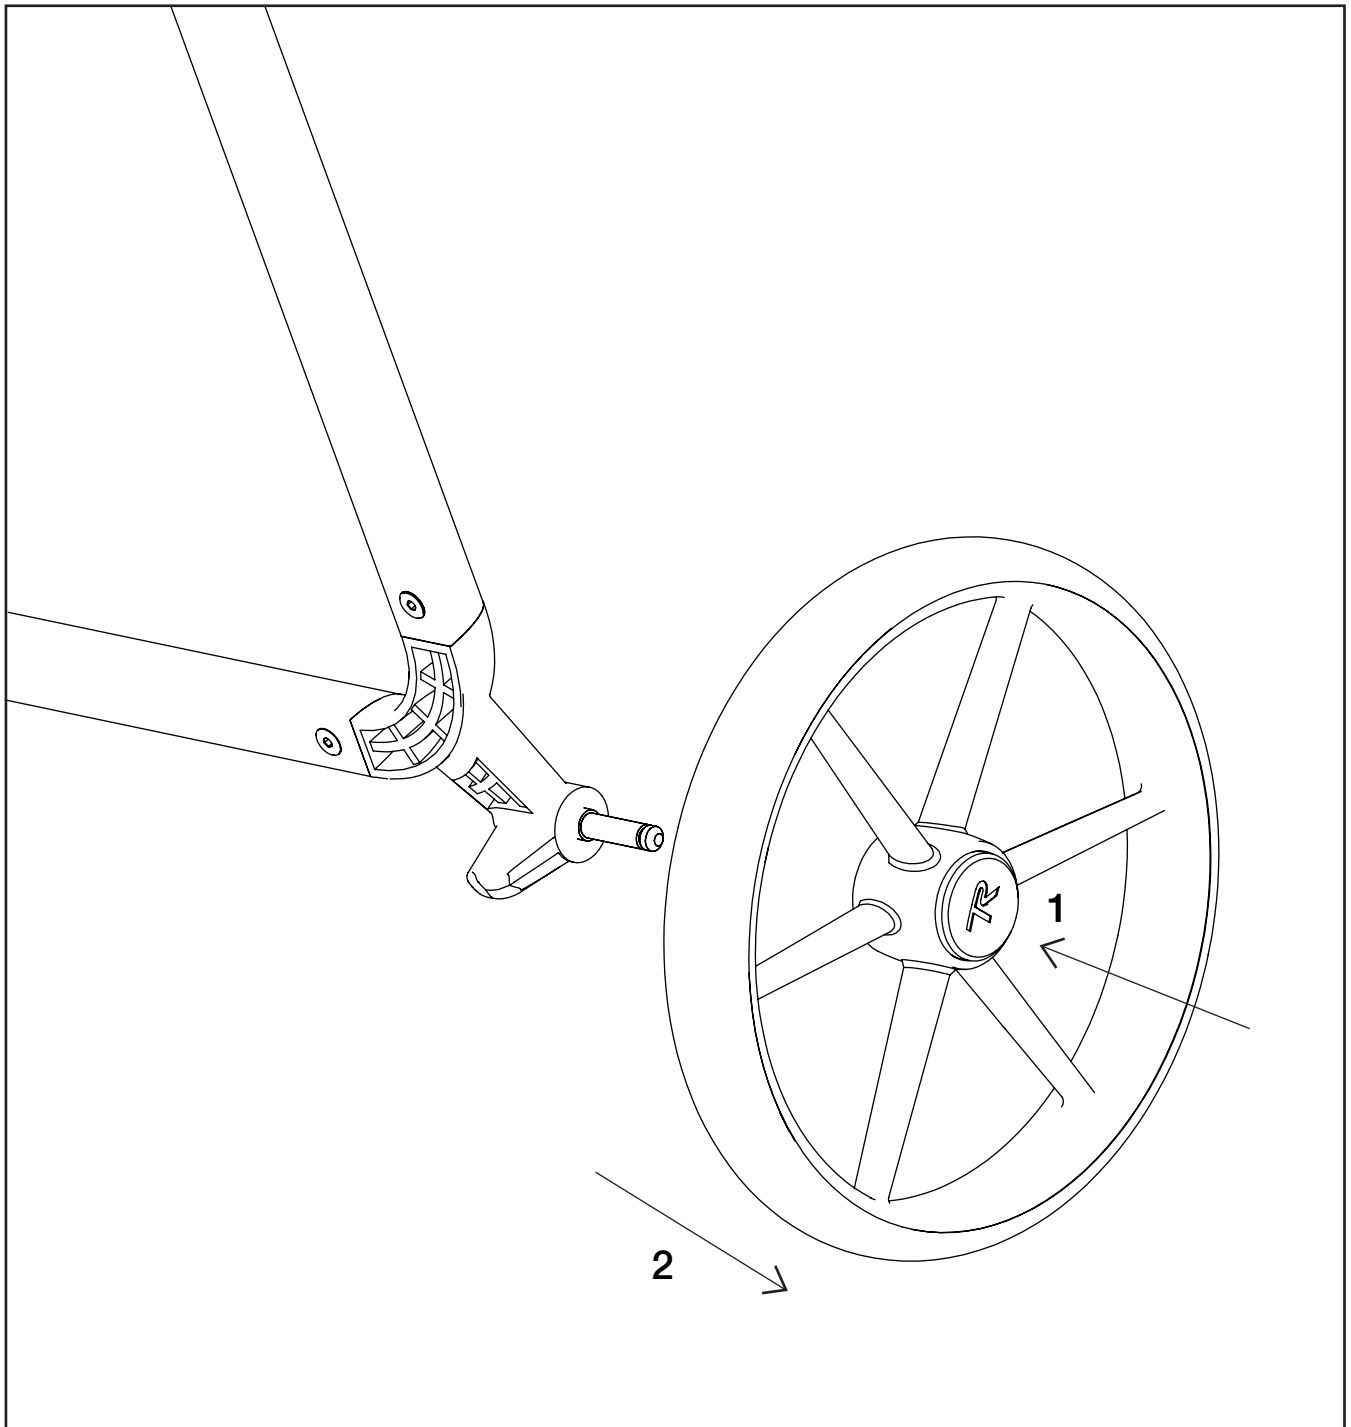

Press the button (1) and pull the wheel out (2). Replace it with the new wheel, then push it back into place.

Exchange of rear wheel connector.

Amore Mio Spare part. Art. No. AM108

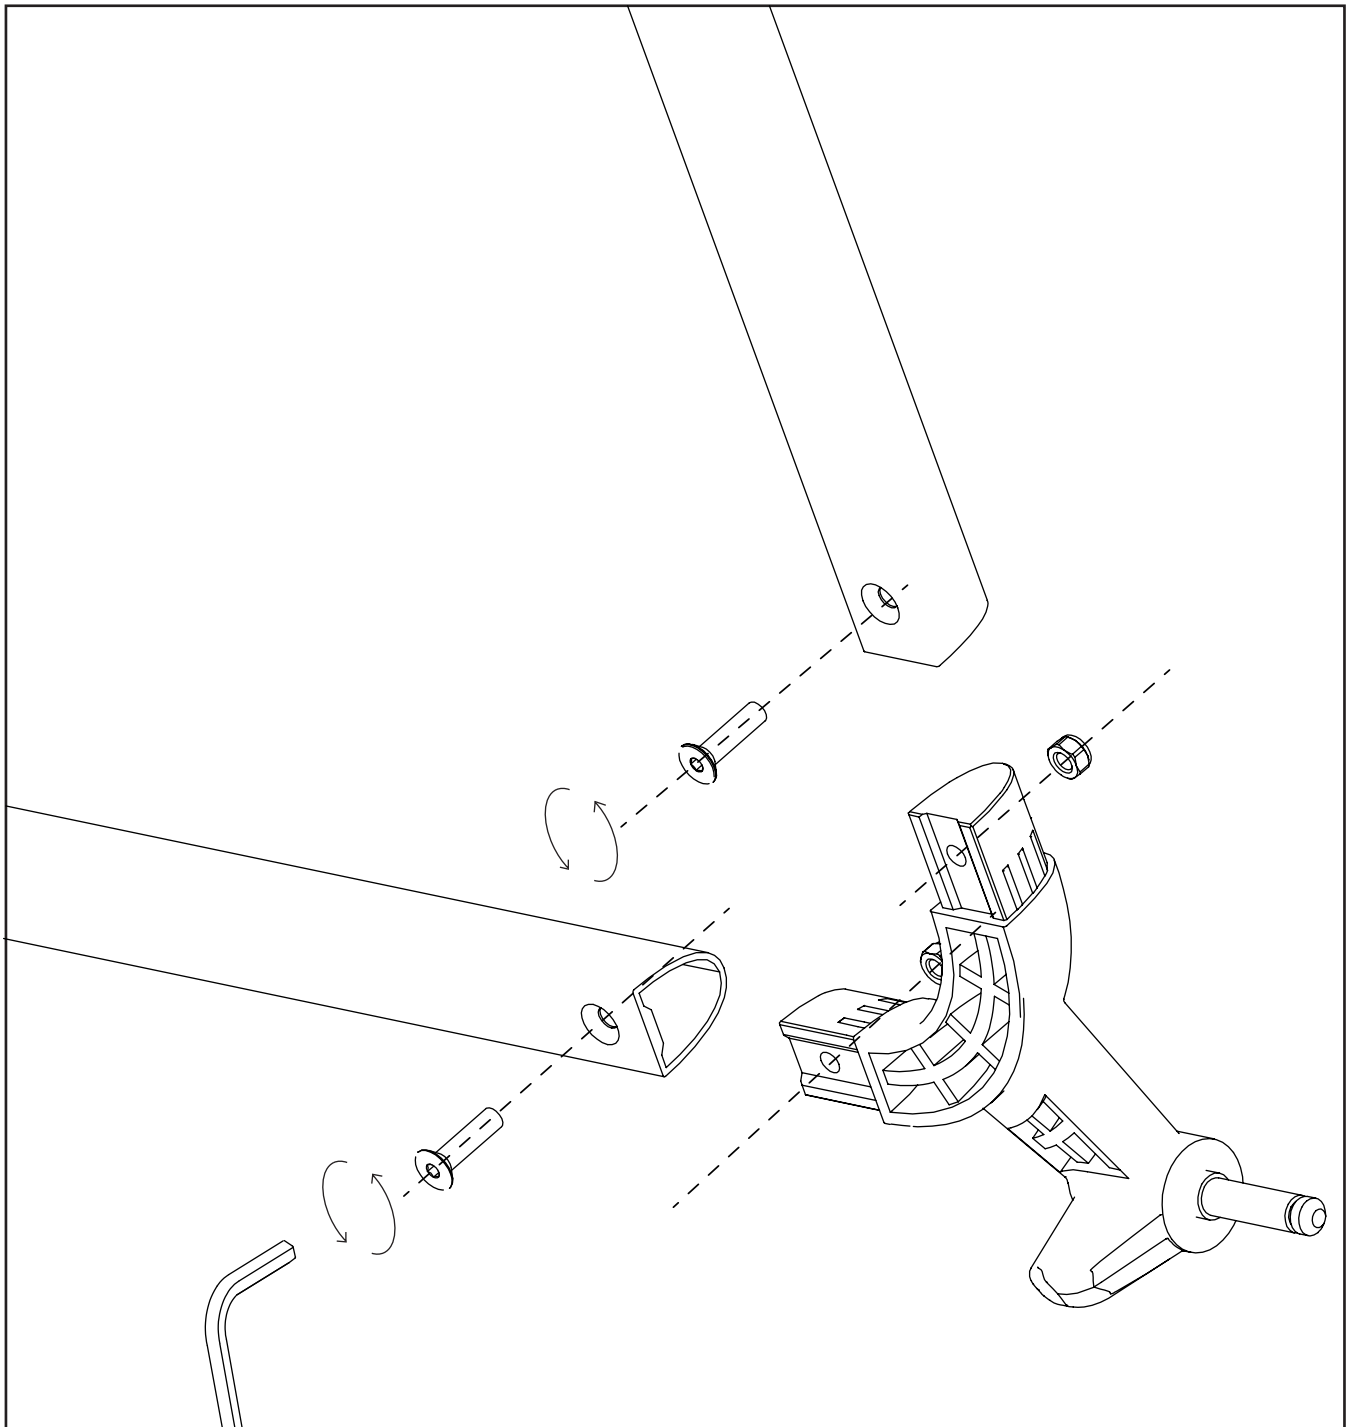


Unscrew the bolts as shown.

Exchange of bearings and button for rear wheel.

Amore Mio Spare part. Art. No. AM109


TRUST
CARE

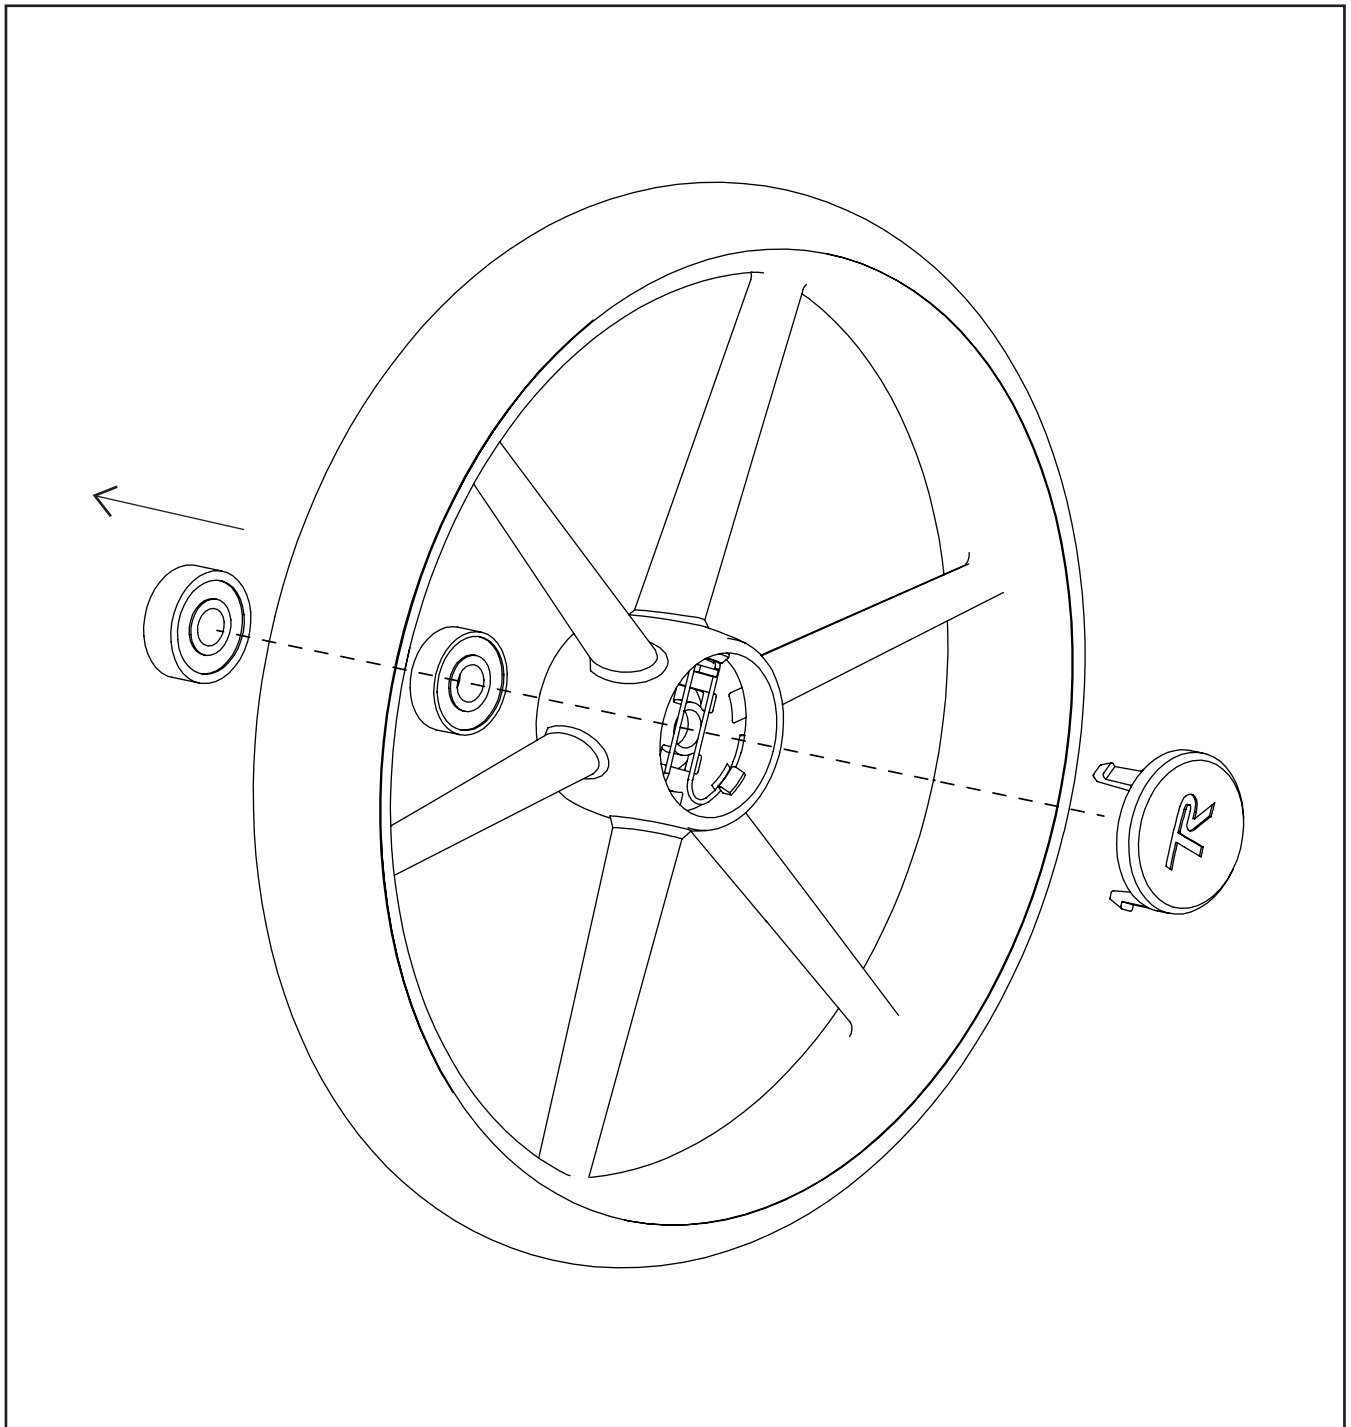

Release the wheel from the frame to exchange the button and bearings.

Exchange of front wheel with bearing.


Amore Mio Spare part. Art. No. AM110

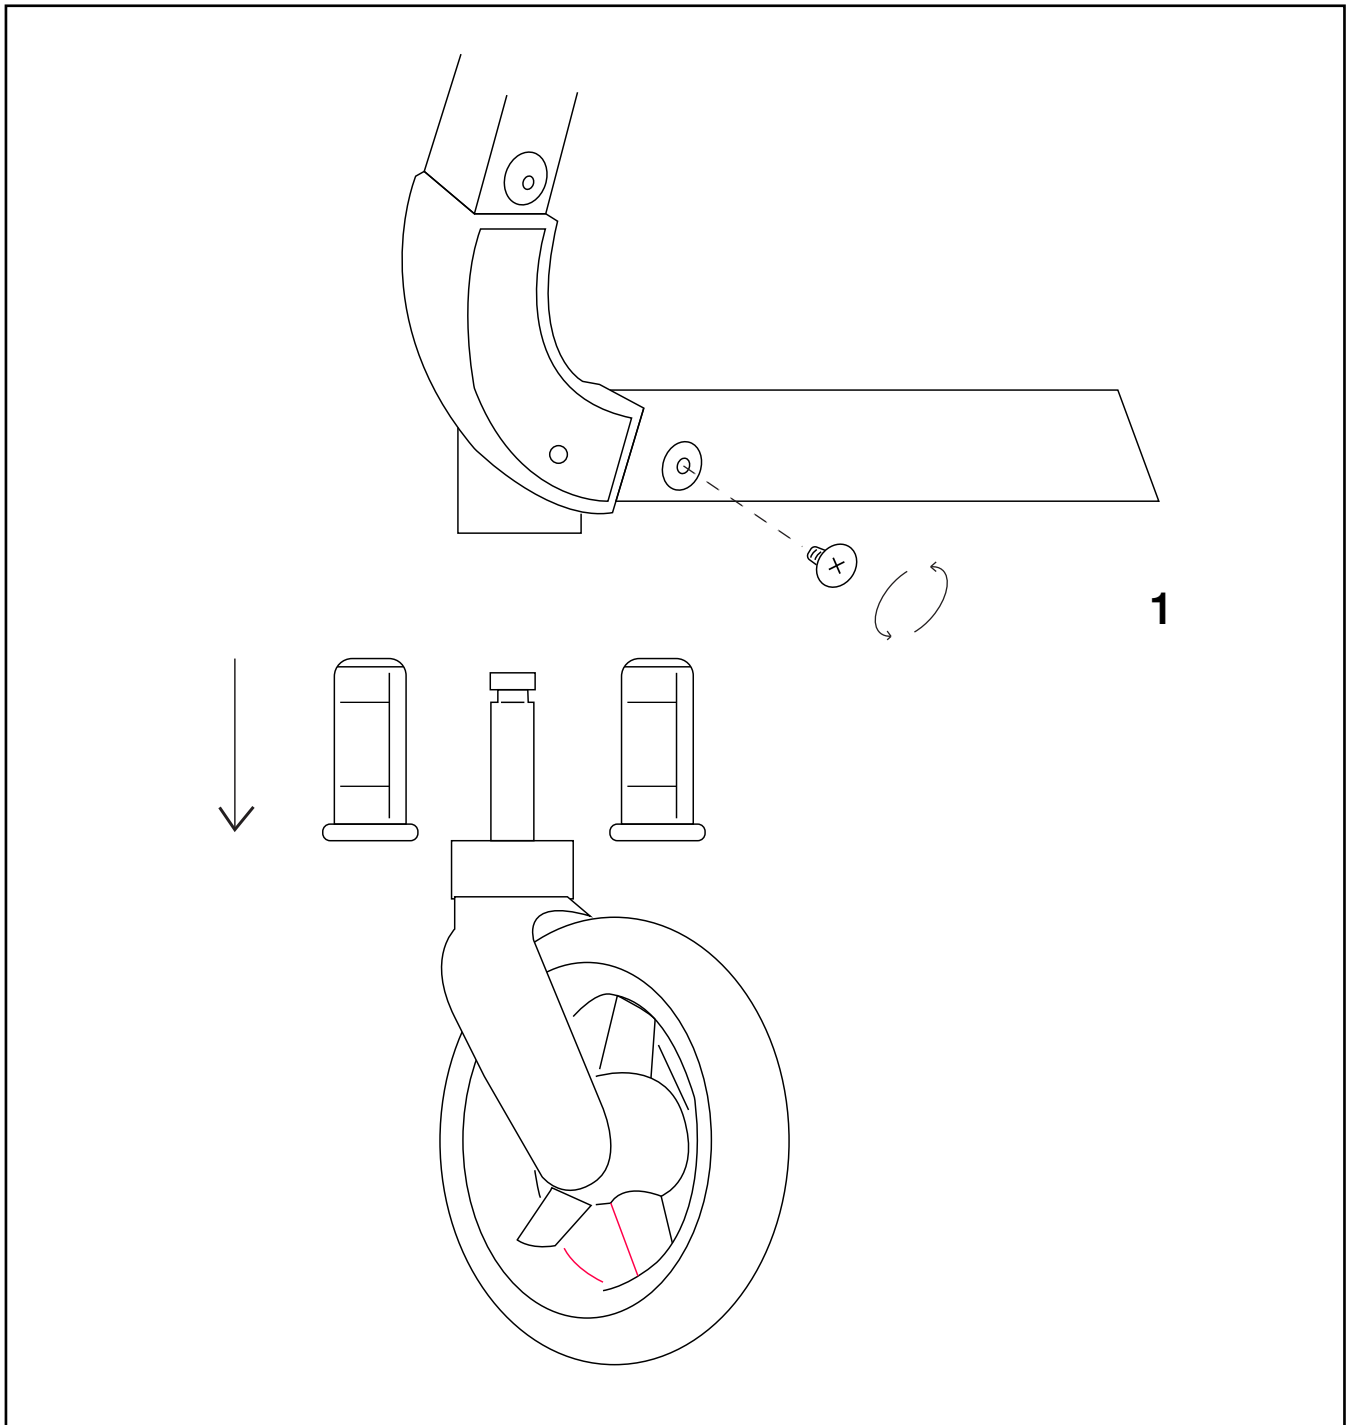

Unscrew the screw (1) and pull the wheel out from the frame.

Exchange of front wheel connector.


Amore Mio Spare part. Art. No. AM111

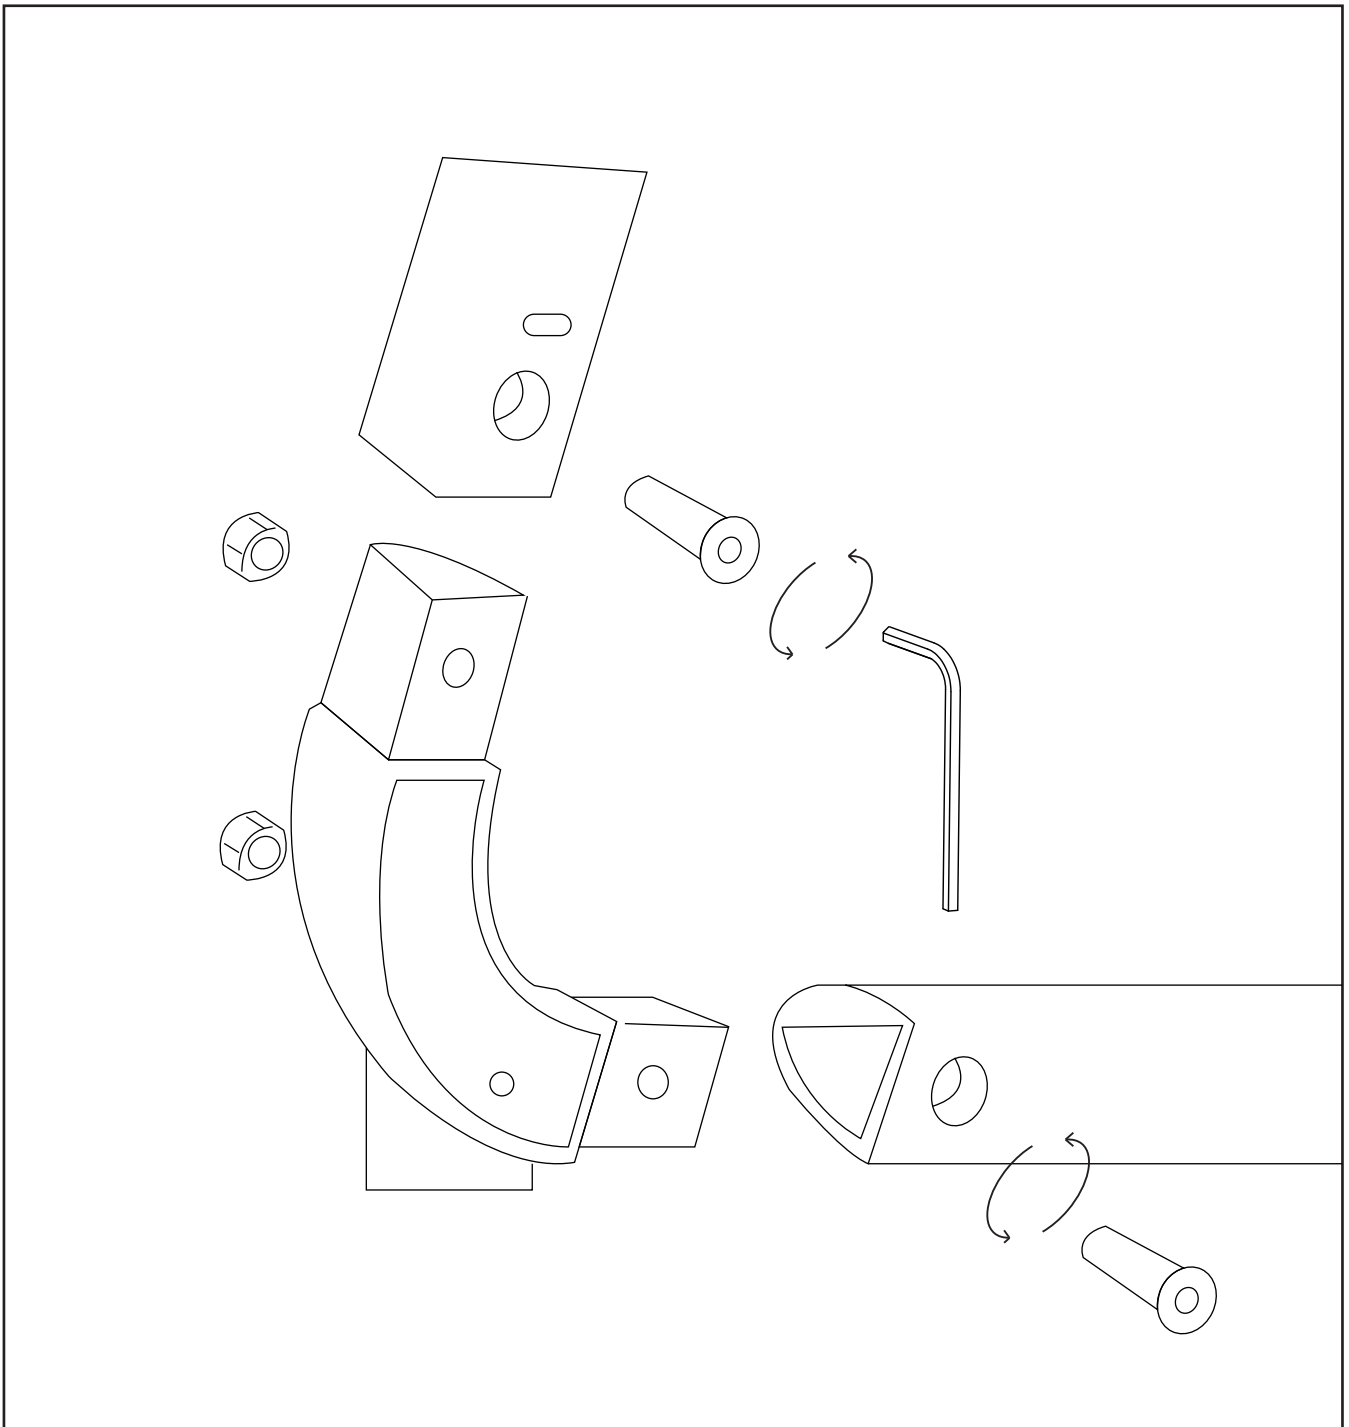

Unscrew the bolts as shown above.


Exchange of gas spring.

Amore Mio Spare part. Art. No. AM107

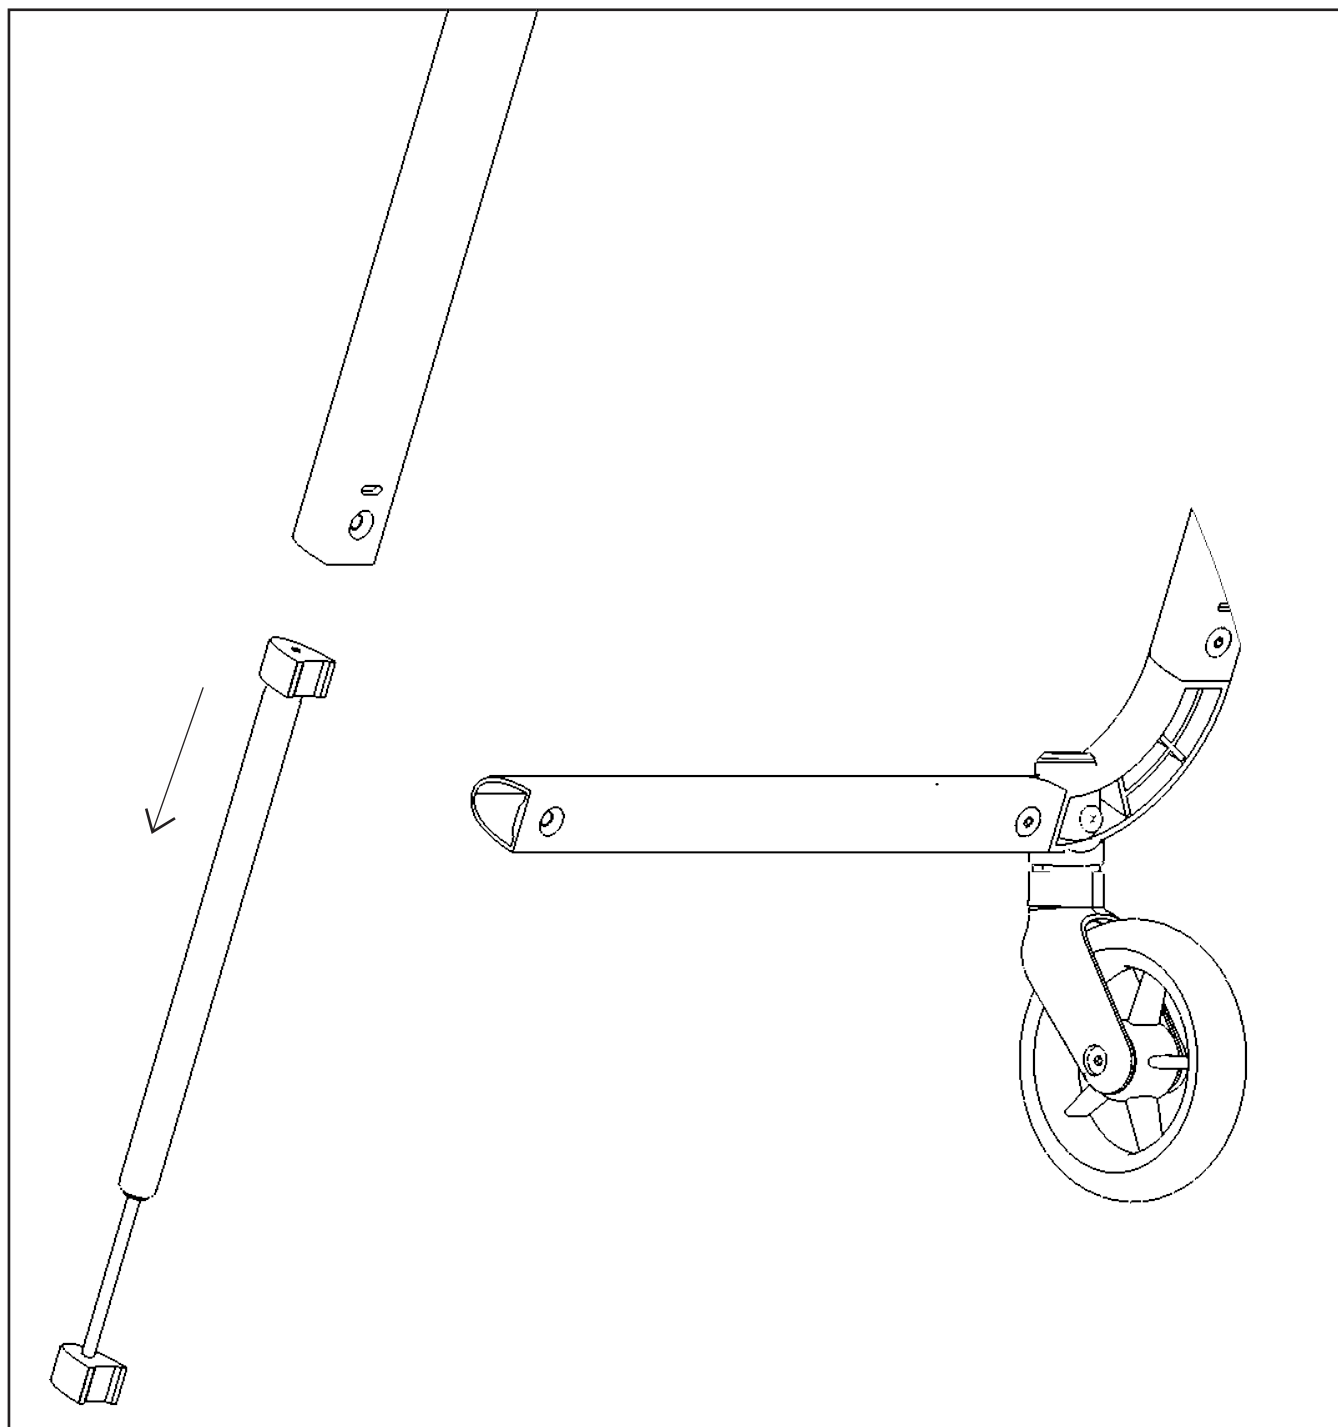


Remove the left front wheel connector as shown in page 9 and the gas spring will slide out.


Disassemble of inner frame

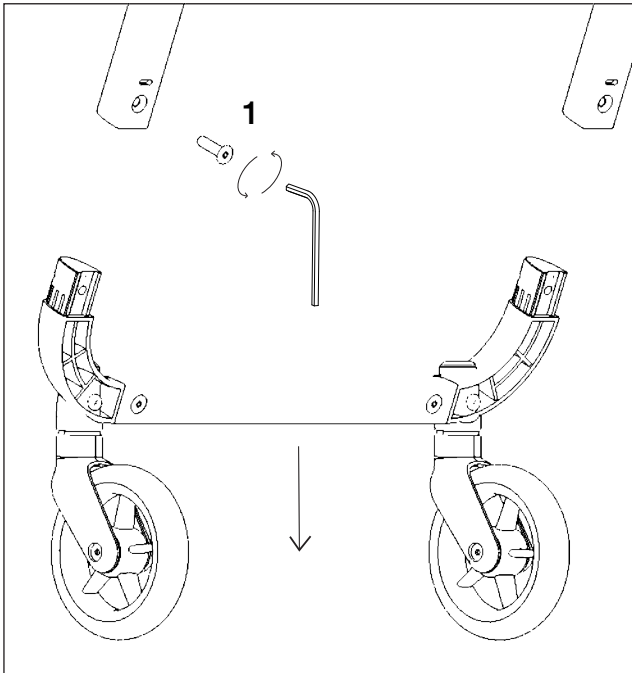

1- Unscrew the bolts as above and pull the lower front frame out.

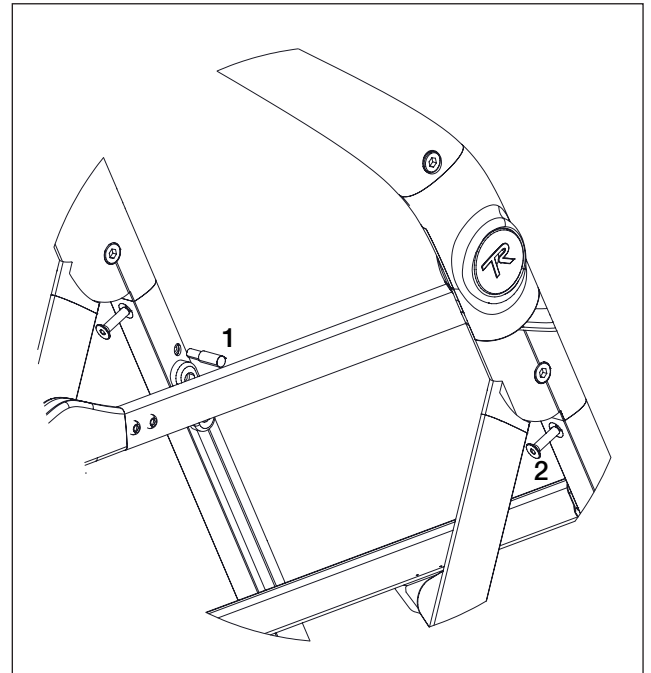

2- Unscrew the pin 1, unscrew the bolts 2 to remove the front tubes.

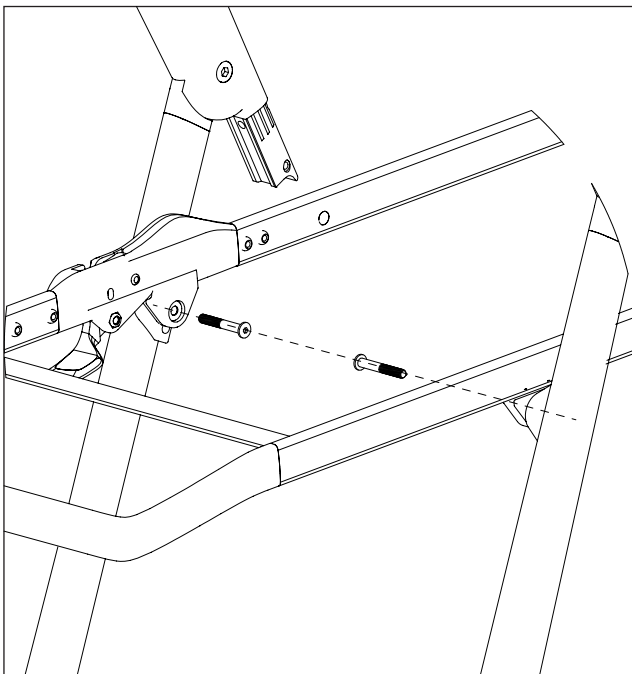


3- Unscrew the bolts above to separate the inner frame

Exchange of lower handle.

Amore Mio Spare part. Art. No. AM102


TRUST
CARE

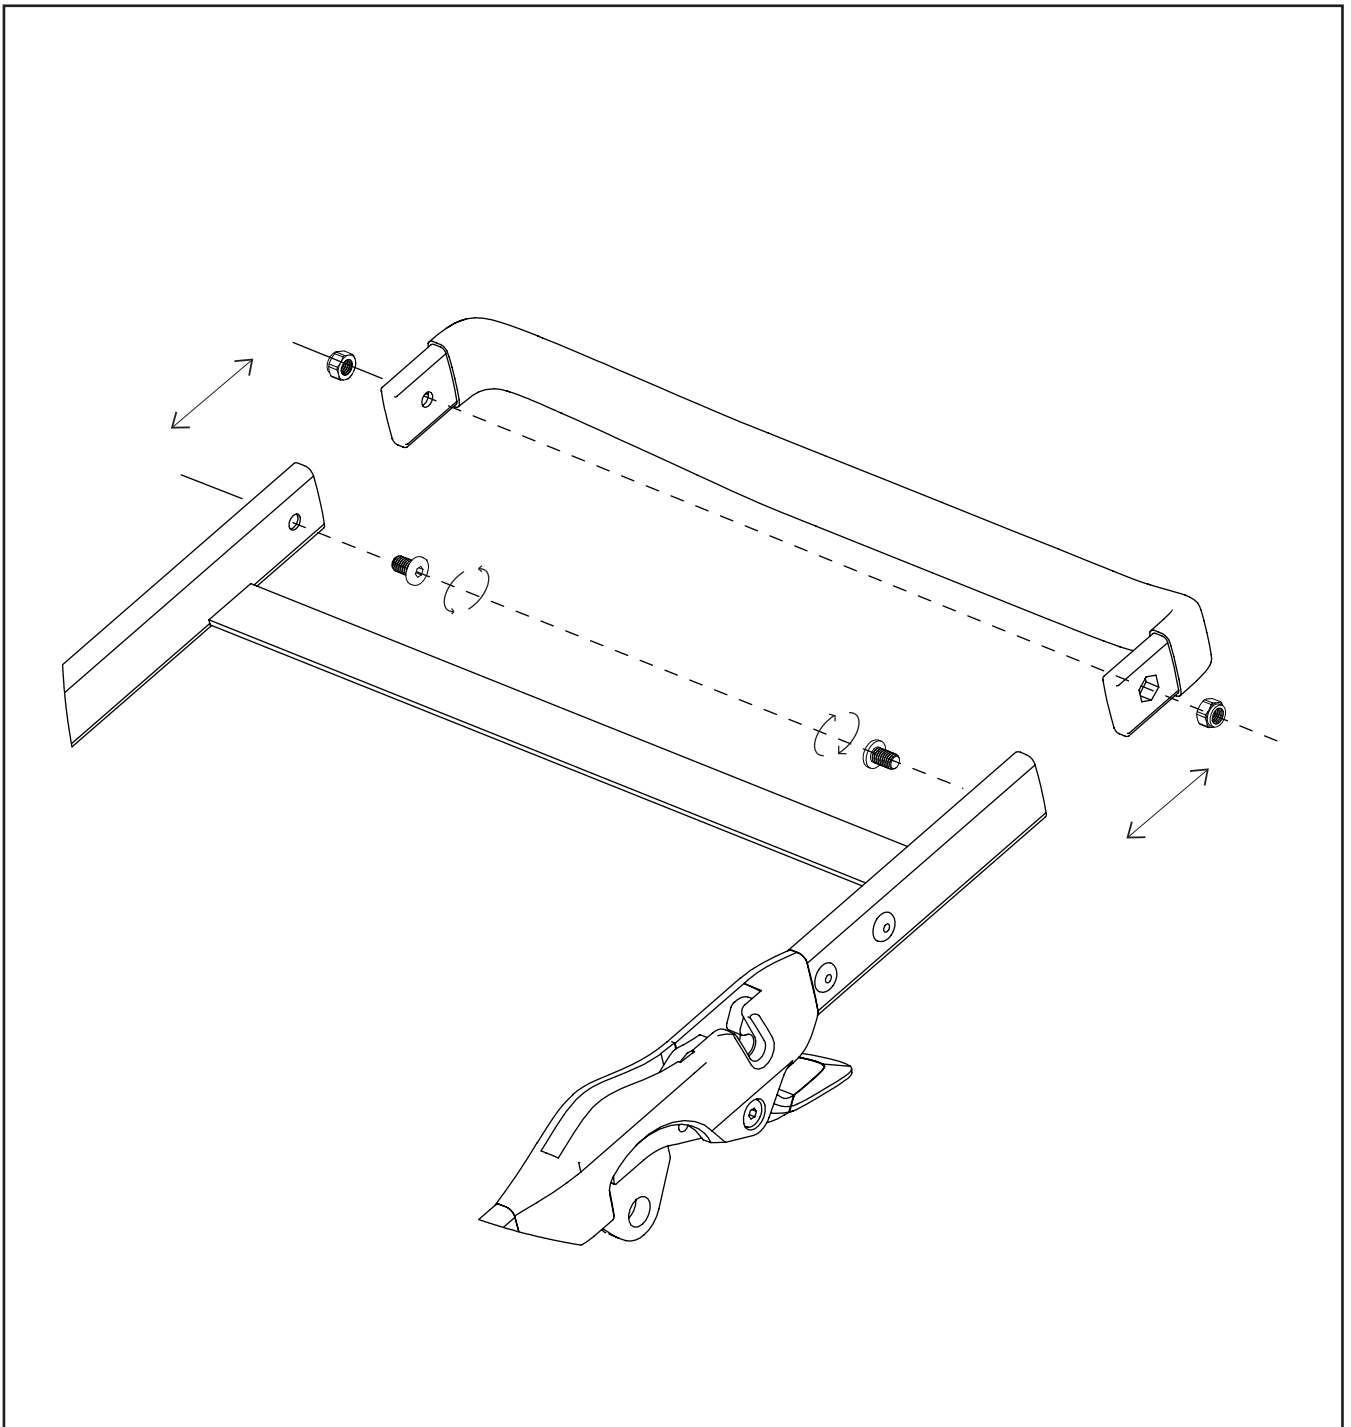


Unscrew bolts to exchange the lower handle.

Exchange of lock mechanism.

Amore Mio Spare part. Art. No. AM105

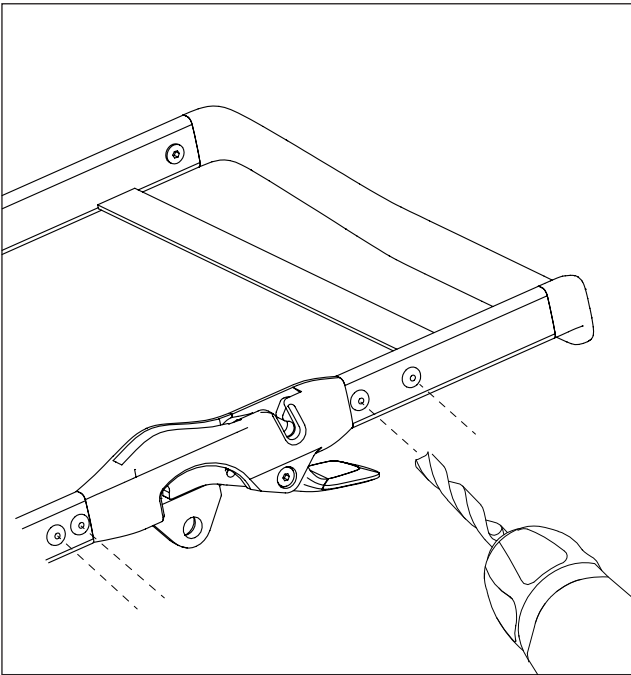


1- Drill the rivets to take the lock out.

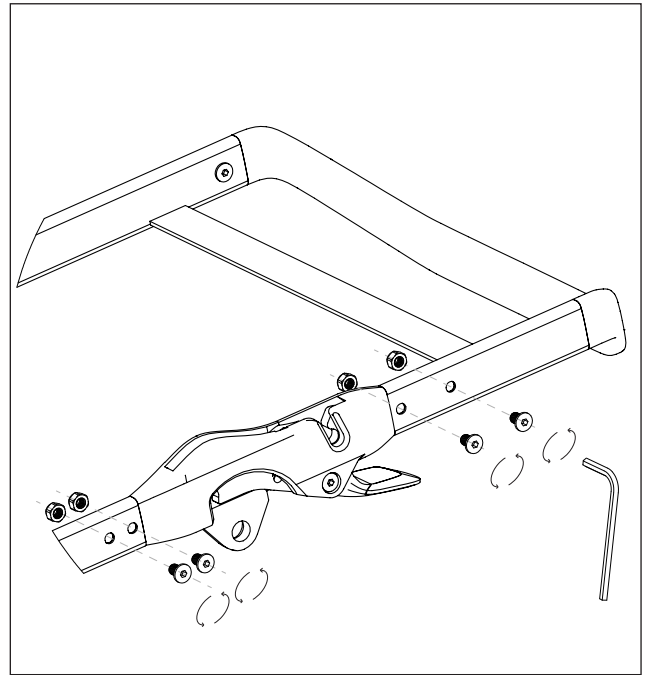

2- Replace with new lock and use bolt and nut to secure in place.

Exchange of slider.

Amore Mio Spare part. Art. No. AM106

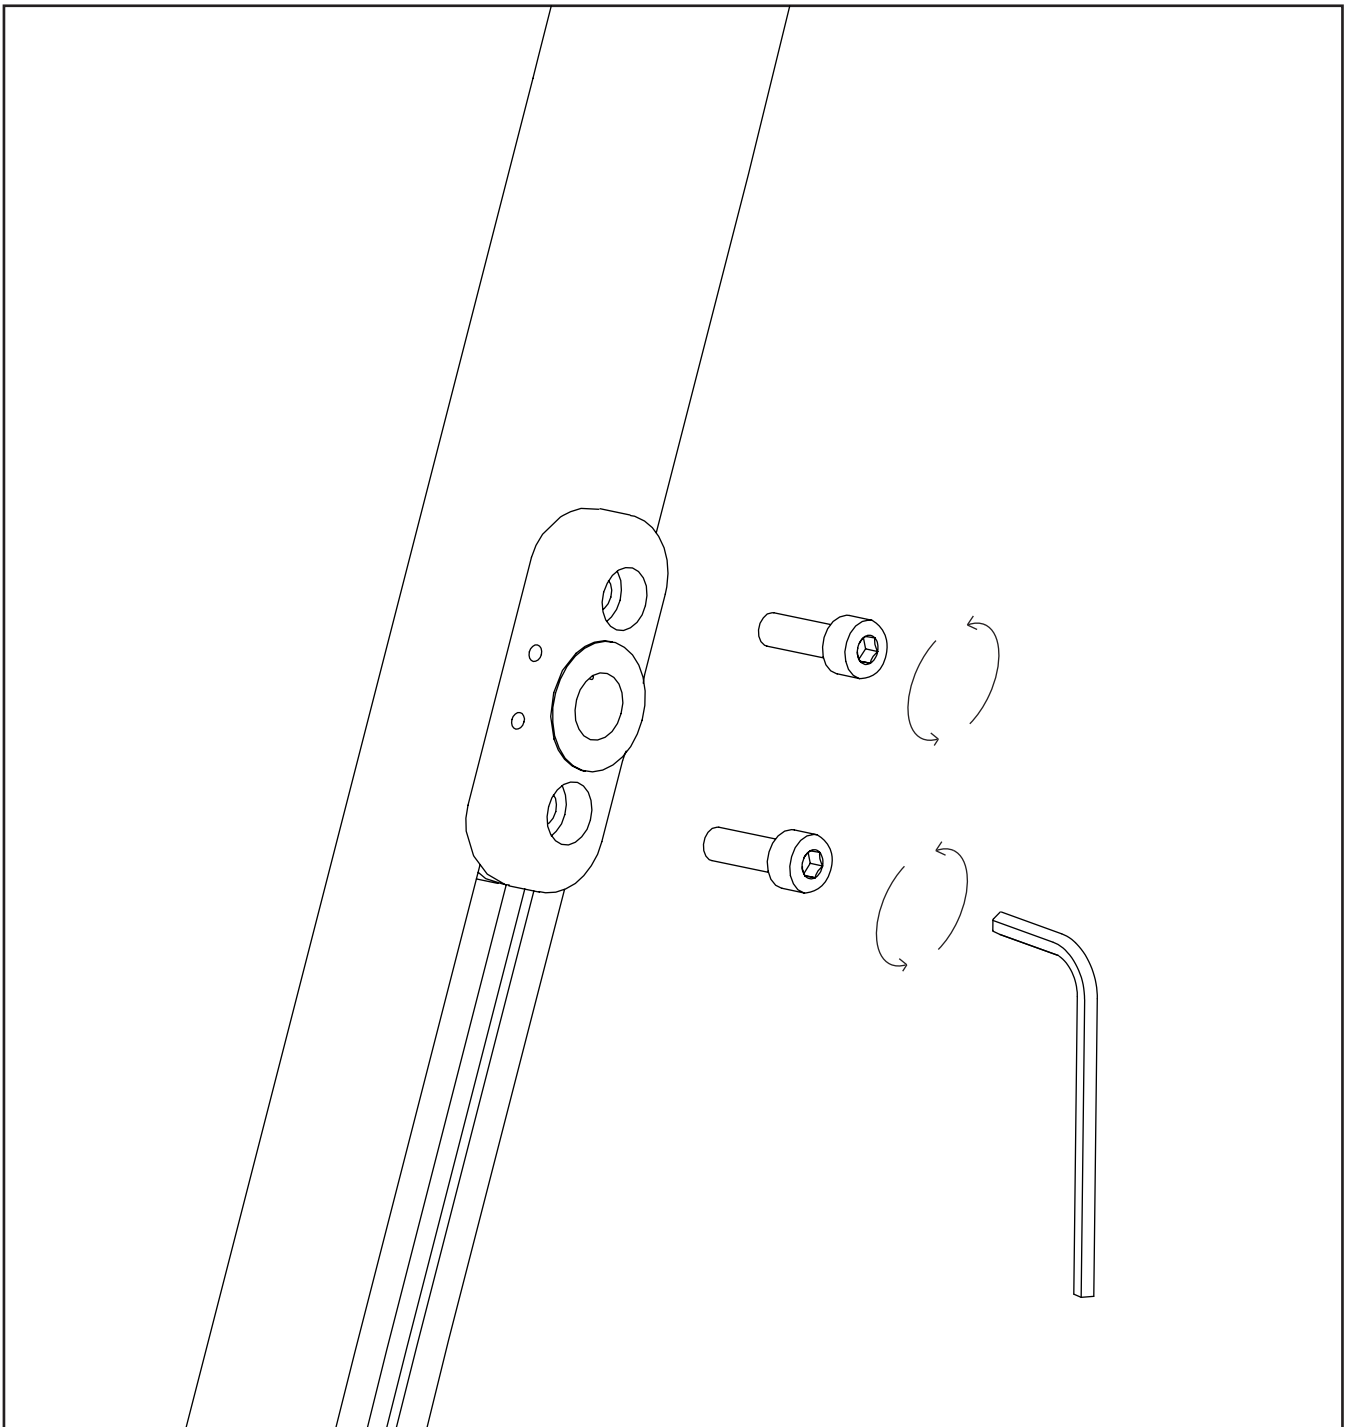


Remove the inner frame first as it's shown in page 11. Unscrew the bolts to release slider.

Separate front / back frames.

Amore Mio Spare part. Art. No. AM104


TRUST
CARE

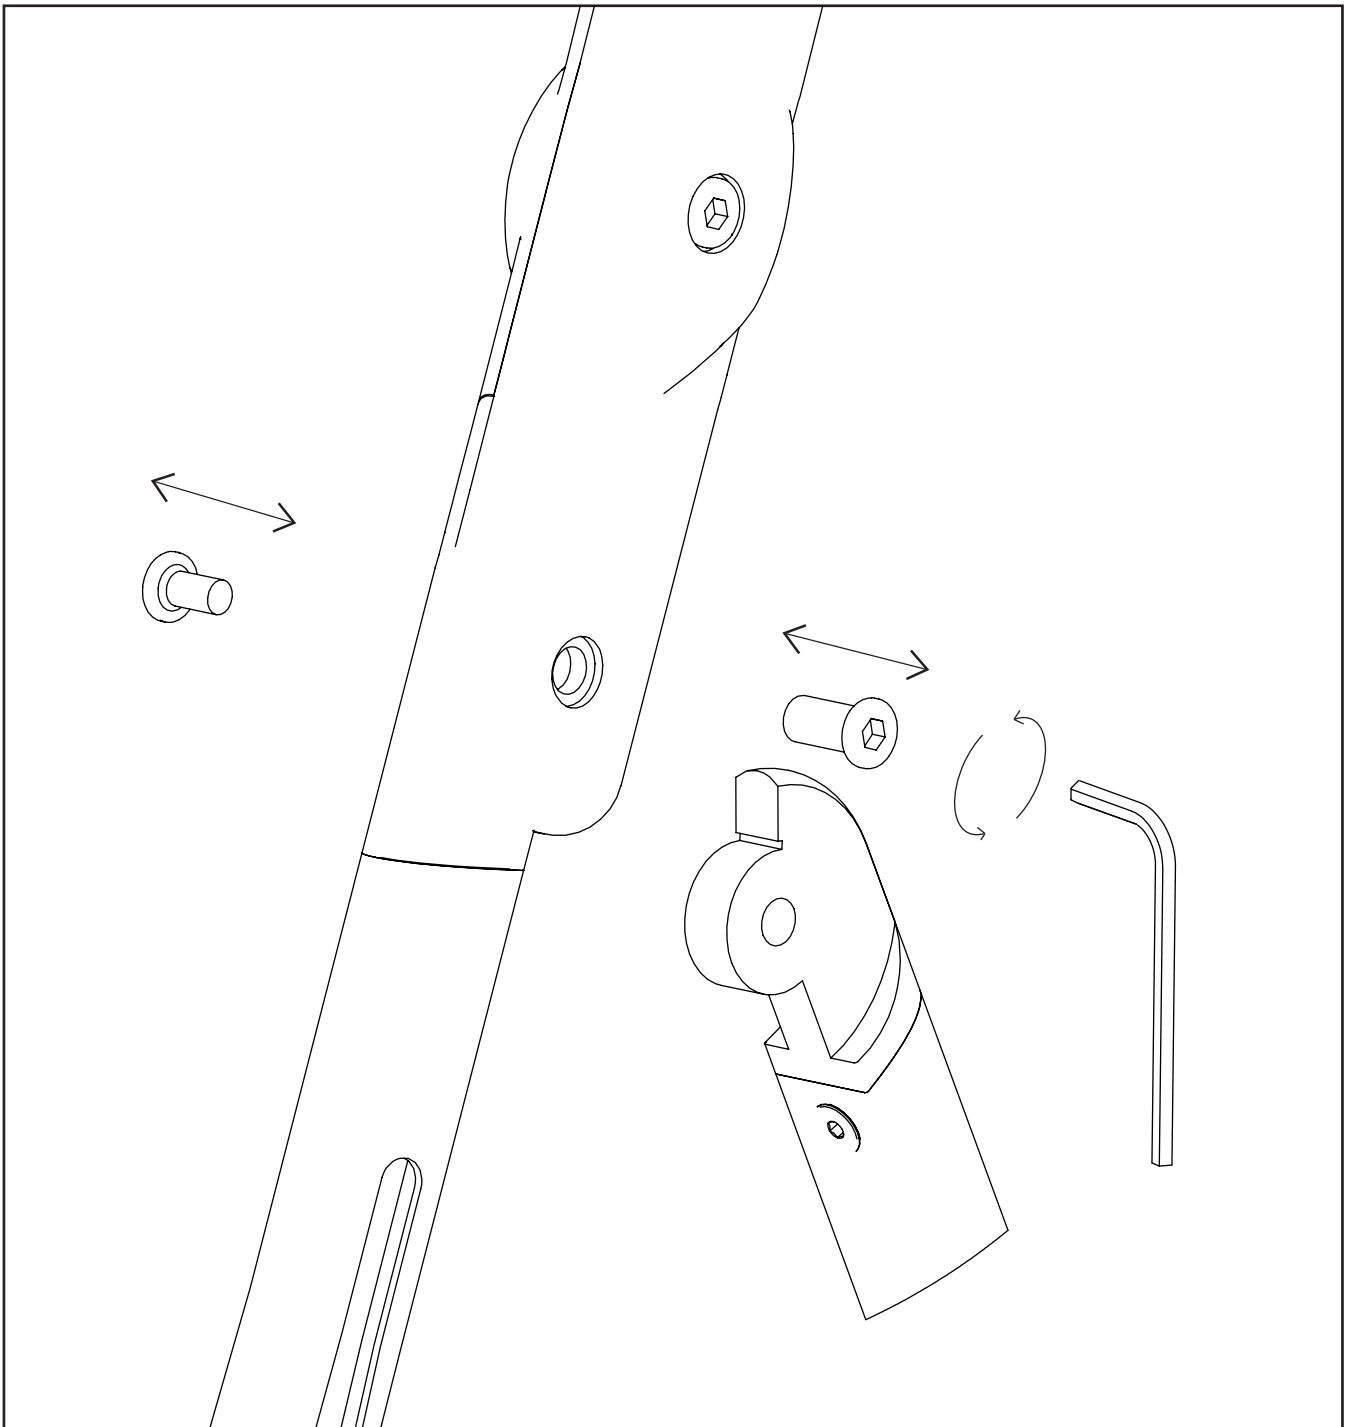

Remove the inner frame first as it's shown in page 11. Unscrew the bolts as above.

Exchange of inner frame holder.

Amore Mio Spare part. Art. No. AM103

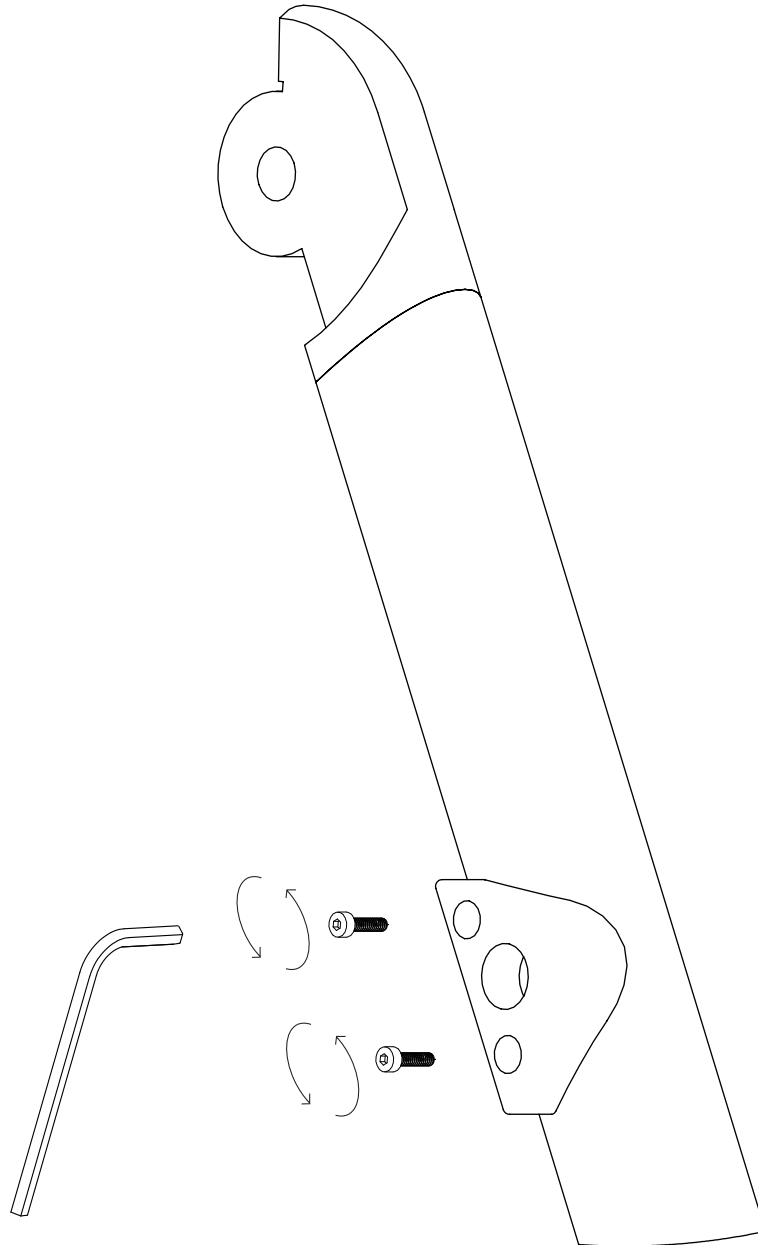

Unscrew the screws as above.

